Push Button Ignition Installation

NOTE: If the burner being installed uses a titled jet, use the 3.0" Spark Igniter. If the burner uses a straight jet, use the 3.25" Spark Igniter.


Use the 3.0" Spark Igniter Use the 3.25" Spark Igniter <u>; 125 ;</u> .125 Straight Tilted Jet Jet CROSSFIRE Brass Burner CROSSFIRE Brass Burner Drill Here Drill Here Plate Plate Spark Spark Igniter Igniter Plate Plate .125" STEP 3: Screw .125 Spark Igniter to plate. Make sure tip of Spark Igniter sits no further than .125" away from the inside • edge of the jet. NOTE: If Spark Igniter is too high when flush with plate, run mechanism up through bottom of

STEP 1: To place Spark Igniter in proper position, the installer will need to drill a hole in the plate.

Measure where to drill holes by holding tip of Spark Igniter no further than .125" away from inside edge of jet. Drill hole where base of Spark Igniter sits.

STEP 2: Place wires through drilled hole and pull through until Spark Igniter bracket is in place on plate.

plate.

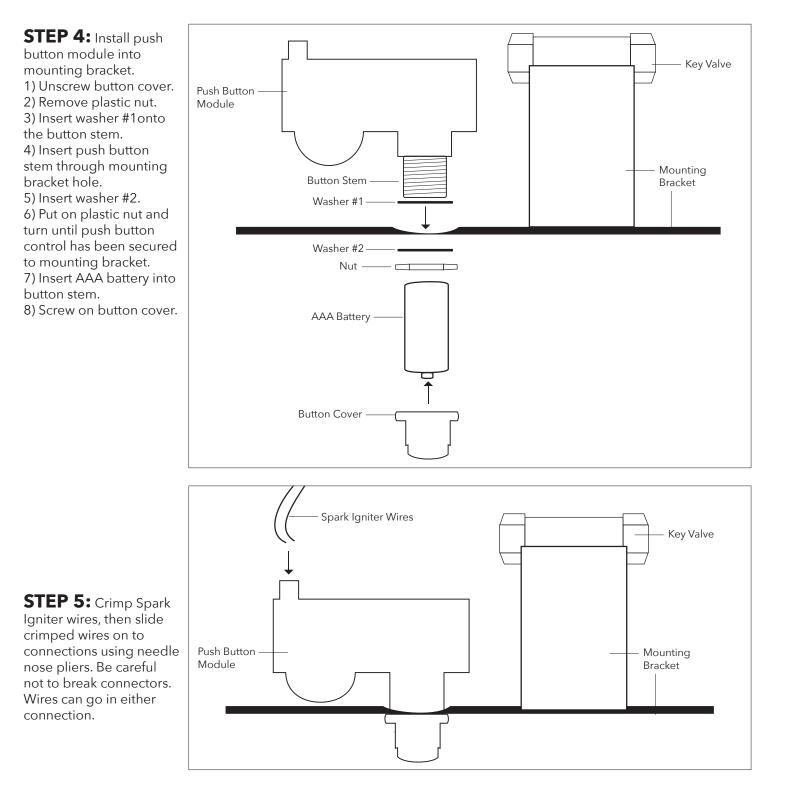

STEP 6: Test Spark Igniter and Push Button Module WITHOUT gas, making sure spark arcs from electricity to jet. **STEP 7:** Test with gas. Burner should light within 5 seconds or a few clicks.

Parts Glossary

